

Firmware update of CA 6161 & CA 6163 instruments using MTT

- The file **696268j_fw616x_v0.1.34_usemtt.zip** allows the firmware update while using the MTT software.

- 1. Upload this file from the **Support** section, Firmware CA 6161 / CA 6163.
- Unzip the ZIP file in the chosen directory: you will get a file "mt-swu-image-rodhcom3bimx6smtproto1.swu" whose name should not be modified.
- 3. Launch MTT, and connect to the instrument.
- 4. Select **"Update"** in the **Help** menu.

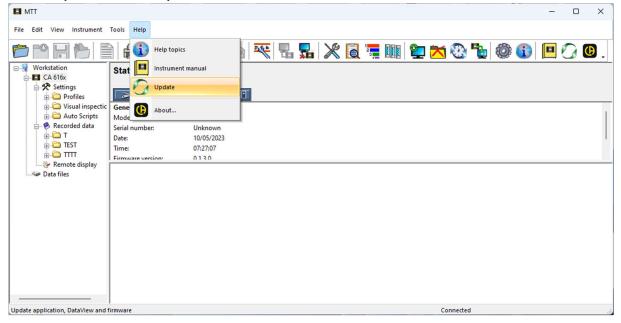

5. If the MTT application and the other applications from the Dataview suite are from the latest version, a message invites you to carry on the process by clicking on **OK** :

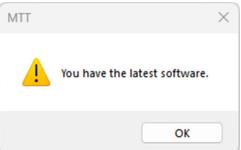

6. If you are no longer connected to internet, a window tells you so. Click on **OK**. This will not prevent you from proceeding with the firmware update of the instrument from the unzip file.



7. If a window indicates that the Control Panel is from the latest version, but that other Control Panels are not from the latest version, you may skip this step by clicking on "**NON**"

MTT		\times
MTT is up to date. Newer versions of other Dat Do you want to install them?	aView components are available. ?	
	Oui Non	

8. In the window "Firmware update", select the file "mt-swu-image-rodhcom3bimx6smtproto1.swu" and then click on "Update".

Firmware update		
mt-swu-ima	ge-ro-dhcom3bimx6smtproto1.swu	Browse
Update progres	5:	

Note: With MTT version 1.3.4 and later, it is no longer necessary to select the file. It is directly imported from an update server.

9. Confirm to continue the update

MTT		×
?	Continue uploading mt-swu-image-ro-dhcom3bimx6smtproto1.swu to the instrument?	
	Oui Non	

The progress bar shows the file transfer to the instrument:

Firmware update	
Firmware file(.SWU):	
mt-swu-image-ro-dhcom3bimx6smtproto1.swu	Browse
Update progress:	
Update Cancel	Help


10. When the file is transferred, MTT invites you to read the messages on the instrument's front panel.

MTT		×
4	Please follow message on instrument panel.	
	ОК	

11. The display of the instrument shows the beginning of the update.

	L PE	0.%	2	2023-05-10	07:36
2	•				
\$	Launching	update	sts		
		Auto S			
e					

Validate the update by clicking on the "green tick".

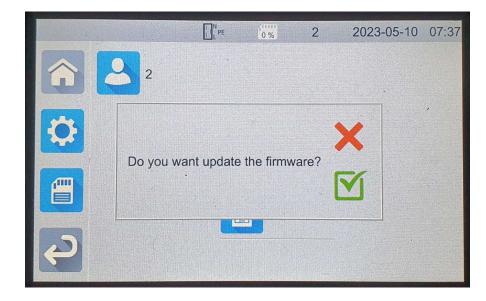

12. Follow the instructions displayed on the front panel of the instrument, which will proceed with two reboots.

Note: the instrument is disconnected from MTT during the update